






# UNDER OVEN HOUSING ASSEMBLY INSTRUCTIONS

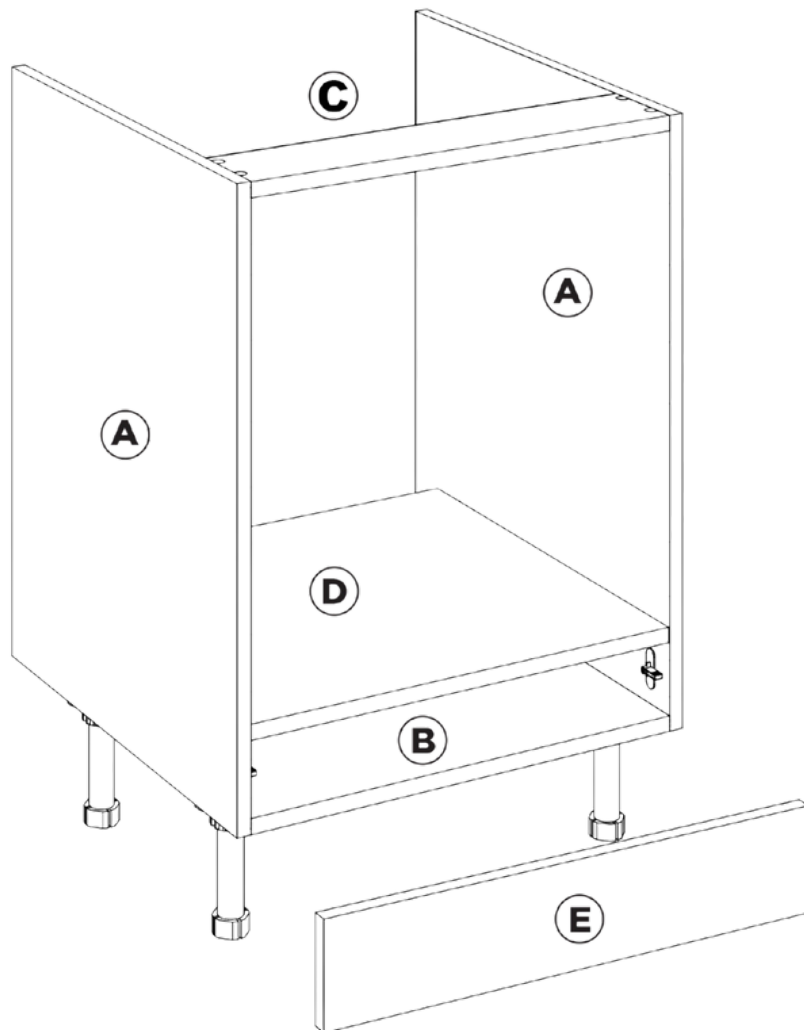

## THE STEP-BY-STEP GUIDE TO INSTALLING YOUR NEW CABINET

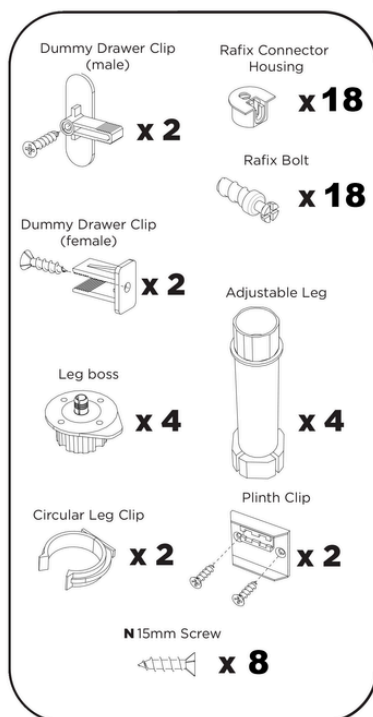


- (A) Base End Panel
- (B) Top/Bottom Panel
- (C) Top Rail
- (D) Fixed Shelf
- (E) Dummy Drawer Front

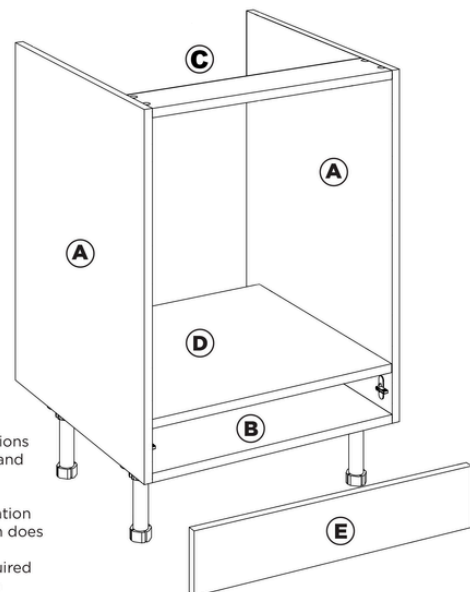

**!** Please note the fitting instructions supplied with your appliance, and pay special attention to the manufacturer's installation requirements regarding ventilation and air circulation. If your oven does not have fan assisted cooling, additional cutting may be required to the cabinet top and bottom panels to create the required ventilations - thus ensuring your oven does not overheat.


## STEP - 1

Align part **B** with **A** using the cam and pin system. Once aligned and inserted lock the cams using a screwdriver

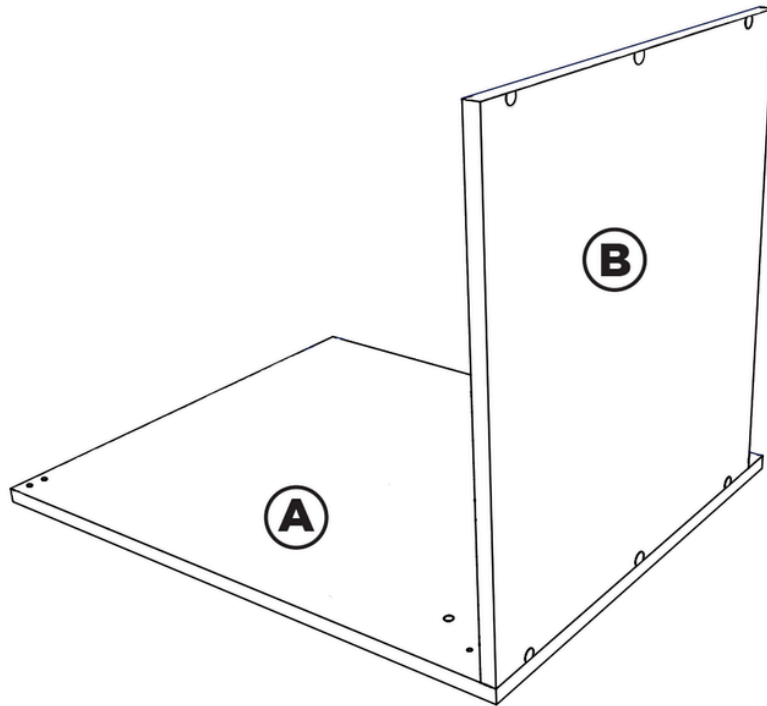


## STEP - 2

Align **part C** with **A** using the cam and pin system. Once aligned and inserted, lock the cams using a screwdriver

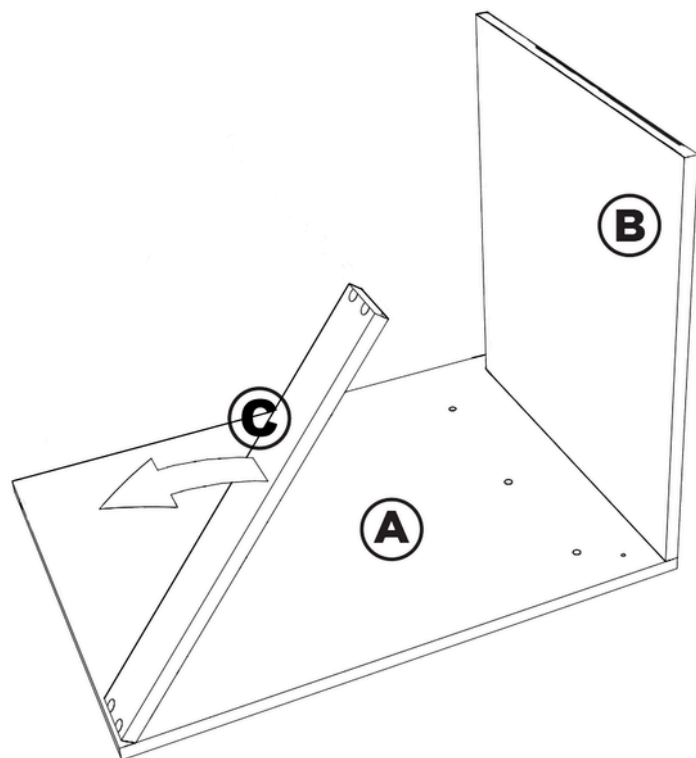


## STEP - 3

Align **Part A** with the rest of the assembly using the pin and cam sytem. Once aligned and inserted, lock the cams with a screwdriver

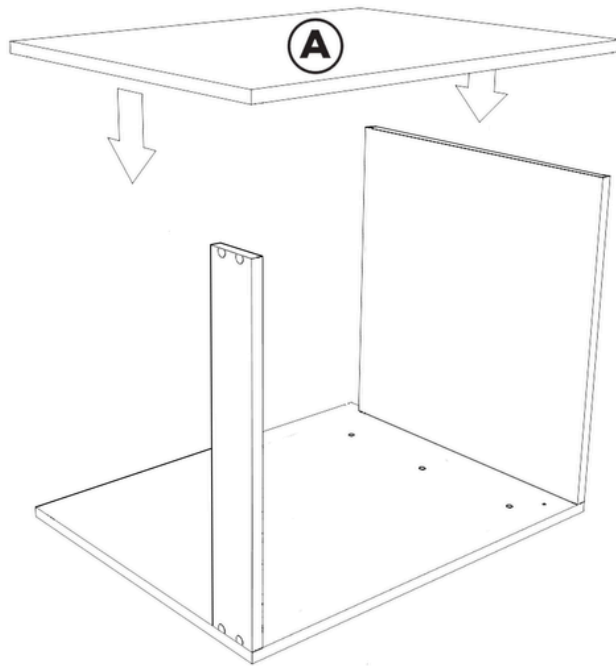


## STEP - 4

Screw dummy drawer clip (male) to ends.

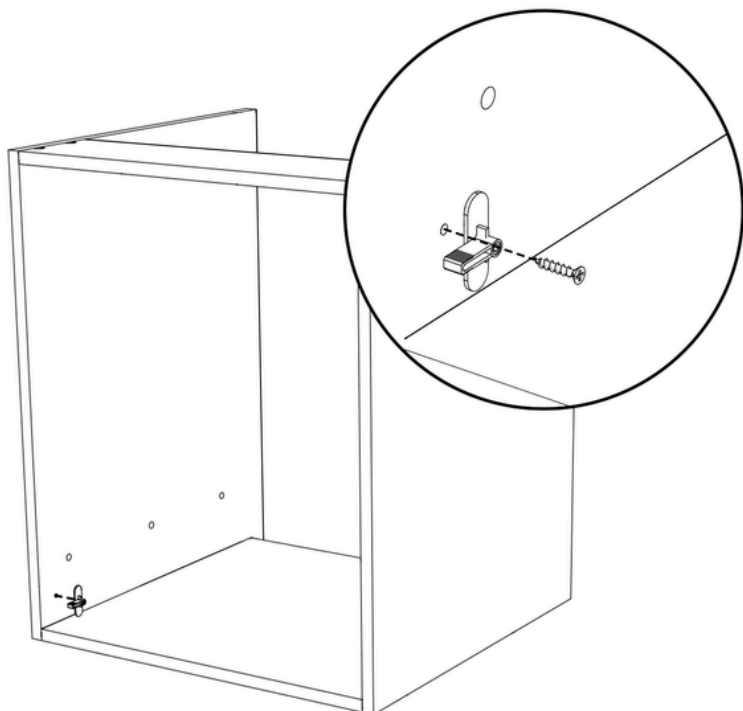


## STEP - 5

Align **Part D** within the cabinet using the cam and pin system. Once aligned and inserted, lock the cass using a screwdriver

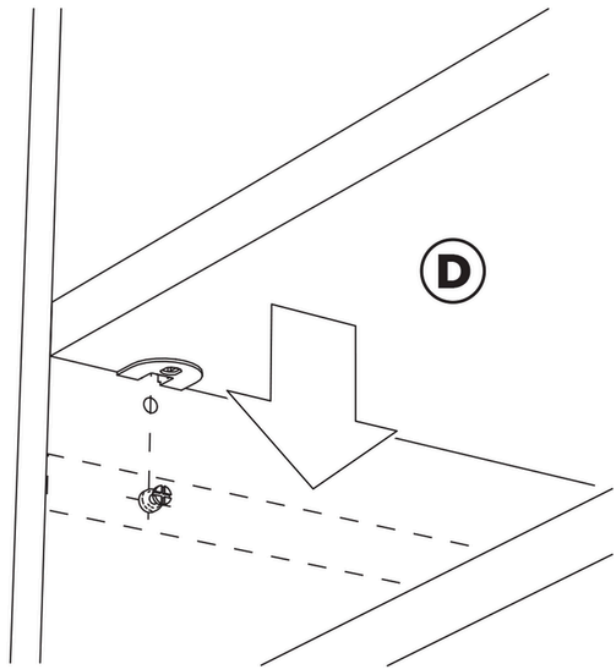


## STEP - 6

Screw leg boss in place

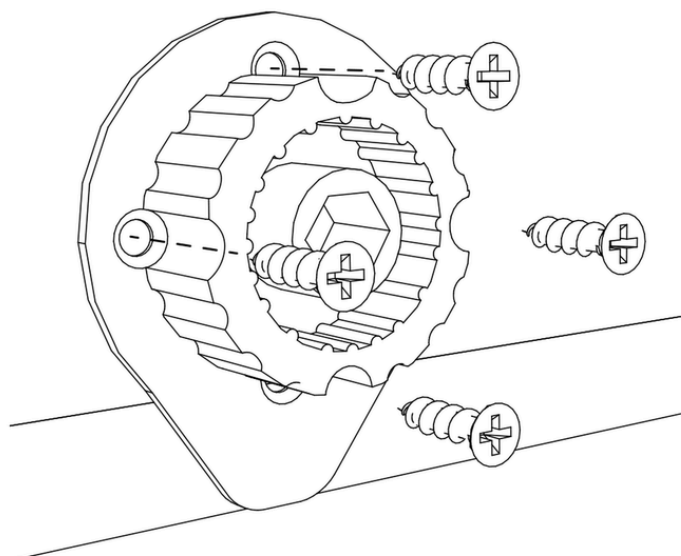


## STEP - 5

Insert legs into boss

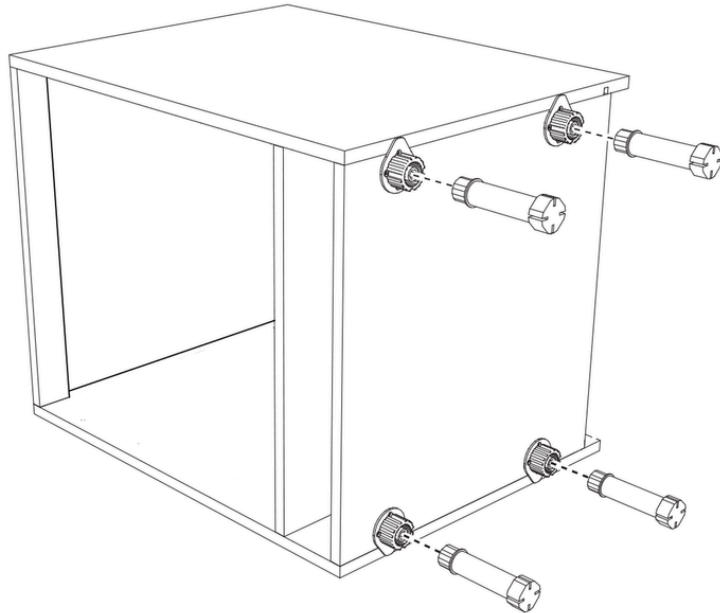

## STEP - 6

Carefully mark and measure position of dummy drawer clip (female) and screw to dummy drawer front.

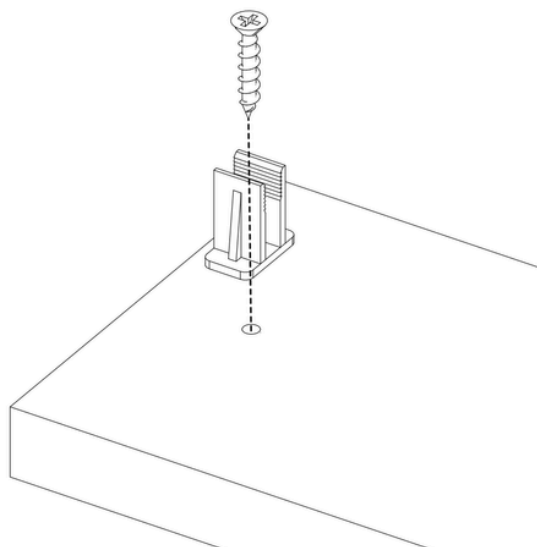

## STEP - 7

Attach dummy drawer front.

